


TILT LATCH OPERATION

The tilt latches are designed so they WILL NOT OPEN WITH UPWARD PRESSURE AGAINST them. THEREFORE PRESSURE must be released to open them.

When offloading, the vehicle; being offloaded should be crowded slightly Forward before opening latches, and before removing straps.

When tilting with no load, pressure can be released by using the foot step provided.

Your new Dolly may be tight, this will improve with use. WD-40 or lightweight oil in the latches and tilt pins will help

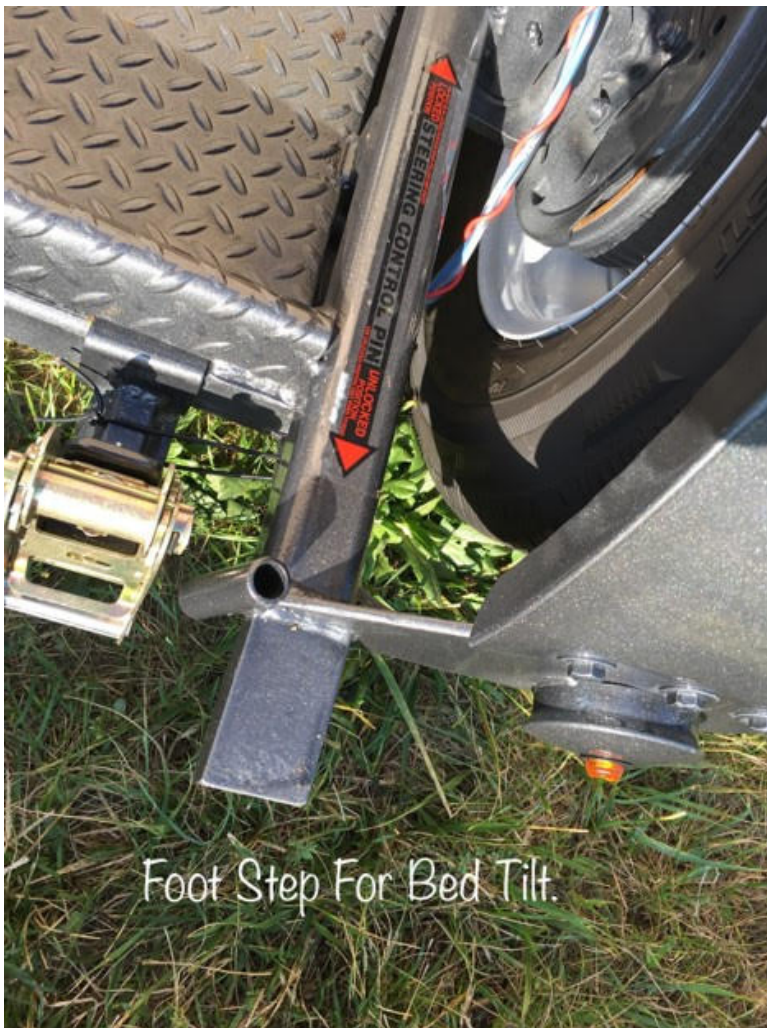



Tilt lock closed



Foot step



Levers down locks
will close when bed is
rotated down-Fwd.



